

EZ1 Installation Guide



Installation

1. Record the Serial Number and 4-digit security code from box or mounting plate of your unit.
2. Remove set screws from bottom of the unit.
3. Connect the unit according to the diagram below.
4. Secure the mounting plate to your mounting surface using appropriate hardware.
5. Reassemble the unit to the mounting plate and replace the set screws.
6. Apply power and confirm the LED is pulsing red. If not, press and release the Admin button.
7. Contact VIZpin Support at +1 717 327 4244 or support@VIZpin.com to set up your account.



Specifications	
Power Input	12VDC, 20mA average
IP/NEMA	IP54
Relay	750mA 12-24 VAC/VDC
Operating Temperature	-40°C to +85°C (-40°F) to (+185°F)
Dimensions	4.3 in. x 1.8 in. x 0.9 in. (108mm x 45mm x 22mm)
Certifications & Approvals	FCC & CE

Installation Tips

- Use the same Earth ground for all components.
- Make sure your power supply is properly rated for the unit and any other devices connected to it.
- Mount the unit in a secure, protected environment.
- Always have an alternate access method, like a key, in case of a power failure.
- Test the unit before you lock the door as building materials may affect read-range.